




# CD/DVD Player


Startup Guide / Guide de démarrage / Anleitung für die Inbetriebnahme / Guida all'avvio / Guía de inicio rápido / Snelstartgids / Startvejledning / Uppstartguide / Käynnistysopas / Guia de Início Rápido / Οδηγός εκκίνησης / Başlangıç Kılavuzu / Příručka spouštění / Használatba vételi útmutató / Ghid introductiv / Instrukcja uruchamiania / Руководство по началу работы / Посібник із налаштування / Іске қосу нұсқаулығы

1


A

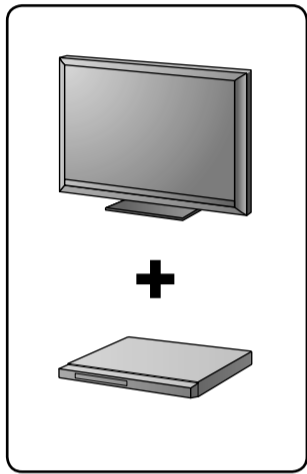


■ HDMI

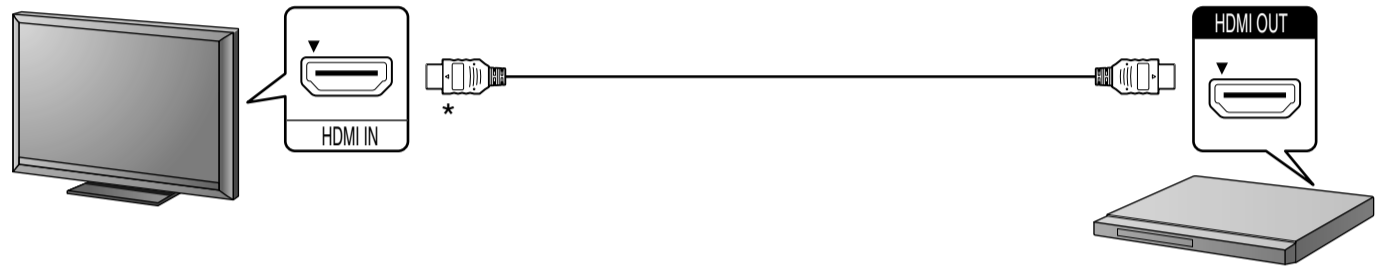


■ VIDEO & AUDIO

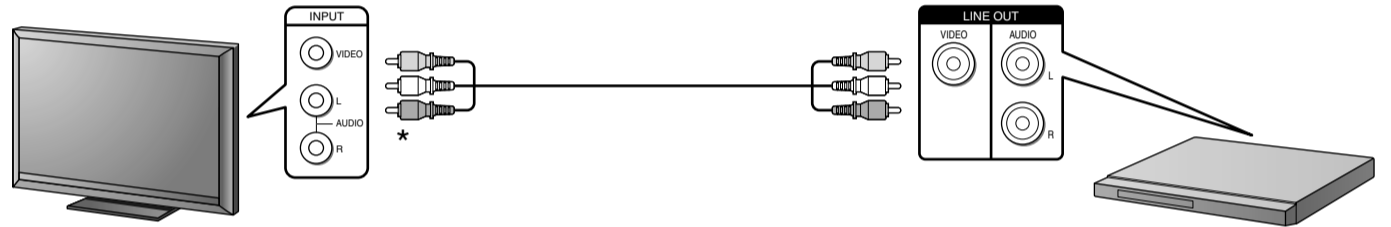


B

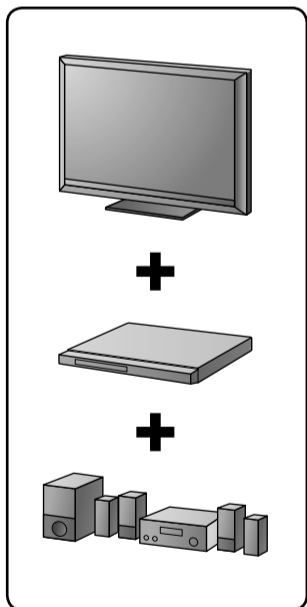

■ HDMI

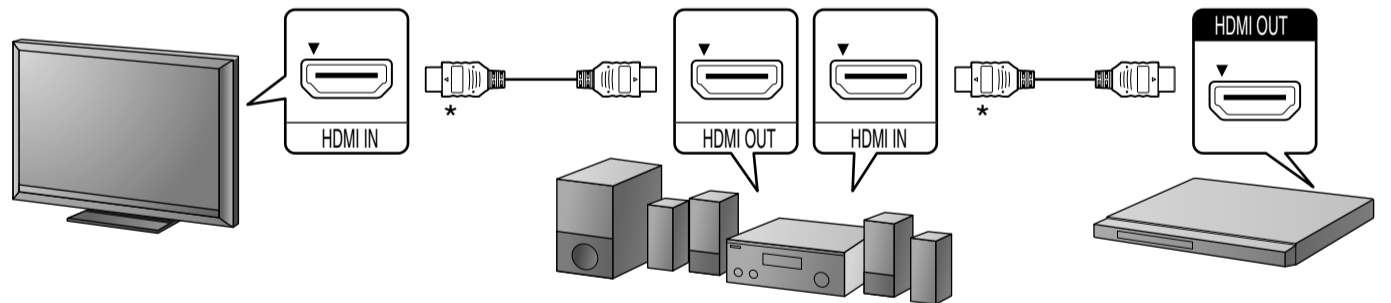


■ COAXIAL

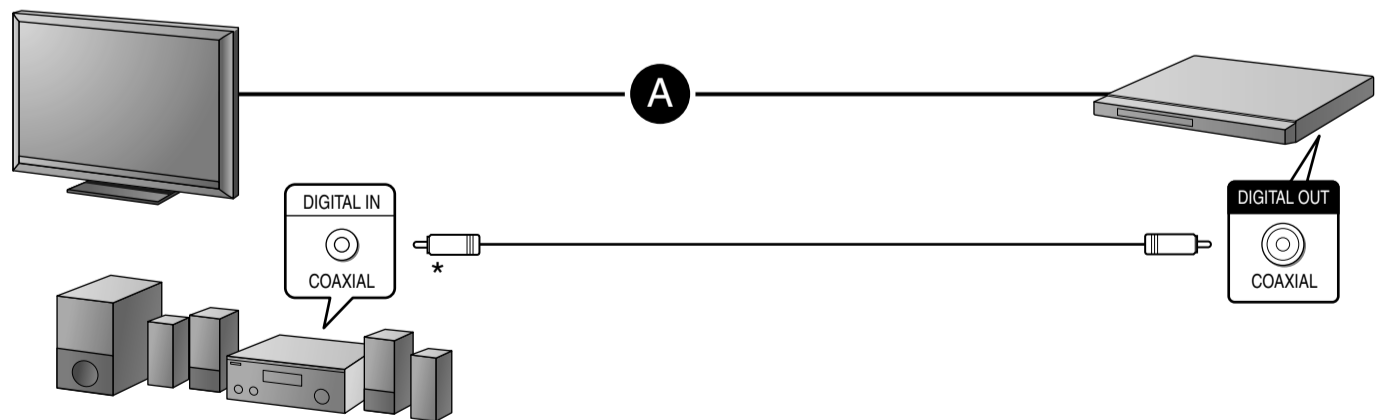


\* Not supplied / Non fornito / Nicht mitgeliefert / Non in dotazione / No suministrado / Niet bijgeleverd / Medfølger ikke / Medföljer ej / Ei sisälly vakiovarusteisiin / Não fornecido / Δεν παρέχεται / Birlikte verilmez / Není součástí dodávky / Külön megvásárolható / Nu este inclus / Nie należy do wyposażenia / Не прилагается / Не поставляется / Берілмерген

# 2



1

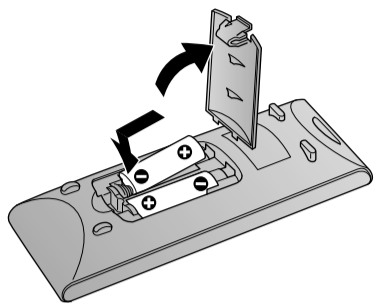

2

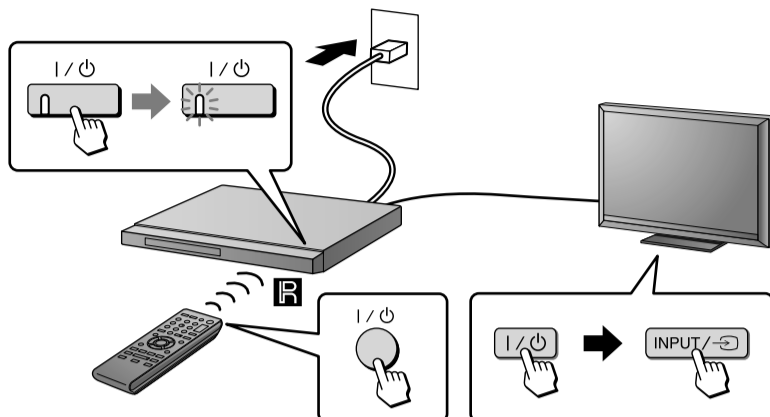


3

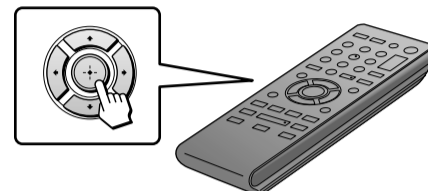
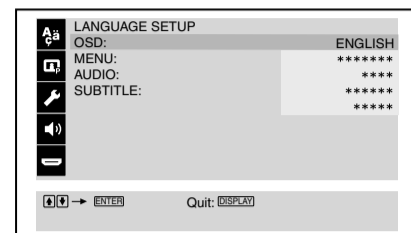


# 3

1

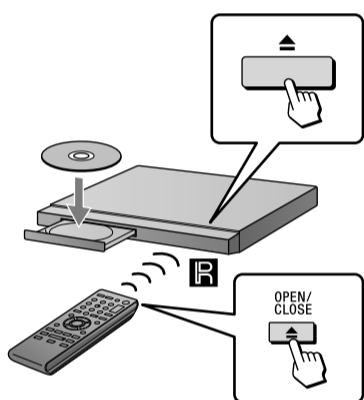

2

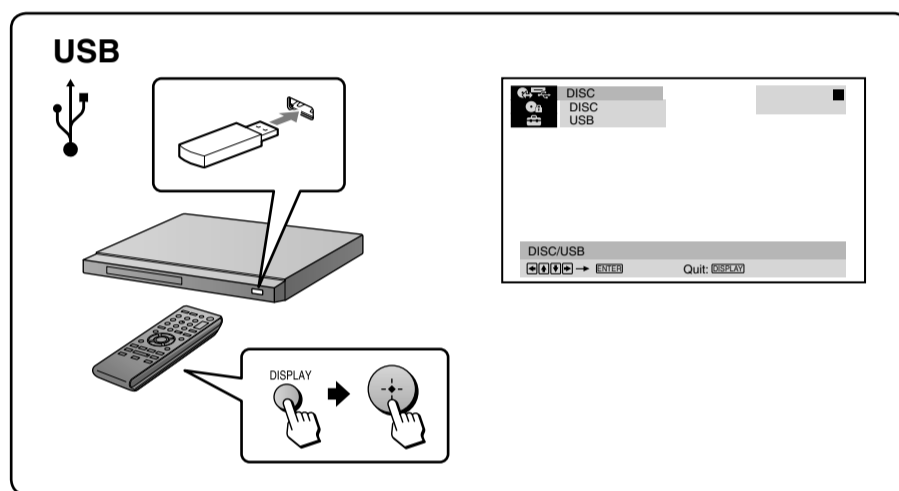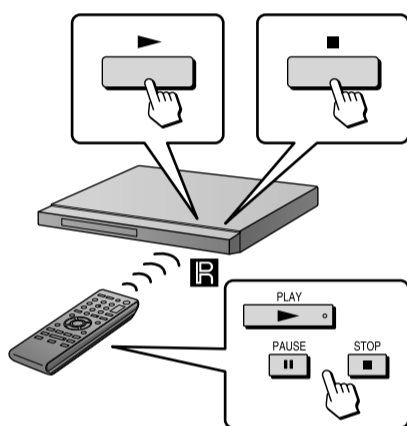

**TIME/TEXT**

**PICTURE NAVI**

**AUDIO**

**SUBTITLE**

**MENU**

**DISPLAY**

**FAST/SLOW PLAY**

**PLAYBACK CONTROLS**