

# Always there to help you

Register your product and get support at  
[www.philips.com/support](http://www.philips.com/support)



AZ215

AZ216



## User manual

# PHILIPS



# Contents

---

<b>1</b>	<b>Safety</b>	<b>2</b>
----------	---------------	----------

---

<b>2</b>	<b>Notice</b>	<b>3</b>
----------	---------------	----------

---

<b>3</b>	<b>Your CD Soundmachine</b>	<b>4</b>
	Introduction	4
	What's in the box	4
	Overview of the main unit	5

---

<b>4</b>	<b>Get started</b>	<b>6</b>
	Connect power	6
	Turn on	7
	Turn off	7

---

<b>5</b>	<b>Play</b>	<b>8</b>
	Play disc	8
	Listen to FM radio	8
	Play from an external device	8
	Adjust volume	9
	Turn Dynamic Bass Boost on/off	9

---

<b>6</b>	<b>Play options</b>	<b>10</b>
	Control play	10
	Program tracks	10

---

<b>7</b>	<b>Product information</b>	<b>11</b>
	Specifications	11
	Supported MP3 disc formats	12
	Maintenance	12

---

<b>8</b>	<b>Troubleshooting</b>	<b>13</b>
----------	------------------------	-----------

# 1 Safety



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

- Make sure that there is enough free space around the product for ventilation.
- Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and - as marked on the unit.
  - Batteries (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
  - Remove batteries when the unit is not used for a long time.
- Only use attachments/accessories specified by the manufacturer:



## Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous laser exposure or other unsafe operation.



## Warning

- Never remove the casing of this apparatus.
  - Never lubricate any part of this apparatus.
  - Never look into the laser beam inside this apparatus.
  - Never place this apparatus on other electrical equipment.
  - Keep this apparatus away from direct sunlight, naked flames or heat.
  - Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.
- 
- The device shall not be exposed to dripping or splashing.
  - Do not place any source of danger on the device (e.g. liquid filled objects, lit candles).
  - Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

## 2 Notice

Any changes or modifications made to this device that are not expressly approved by Gibson Innovations may void the user's authority to operate the equipment.



This product complies with the radio interference requirements of the European Community.

### Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU. Inform yourself about the local separate collection system for electrical and electronic products. Follow local rules and never dispose of the product with normal household waste. Correct disposal of old products helps prevent negative consequences for the environment and human health.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), paper pulp (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

This apparatus includes these labels:



Class II equipment symbol



This symbol indicates that the apparatus has a double insulation system.

### Note

- The type plate is located on the bottom of the apparatus.

# 3 Your CD Soundmachine

---

## Introduction

**With this unit, you can:**

- Enjoy audio from discs, and other external devices;
- Listen to FM radio stations

 
---

## What's in the box

Check and identify the contents of the package:

- Main unit
- AC power cord
- Short User Manual
- Safety and Notice sheet

## Overview of the main unit

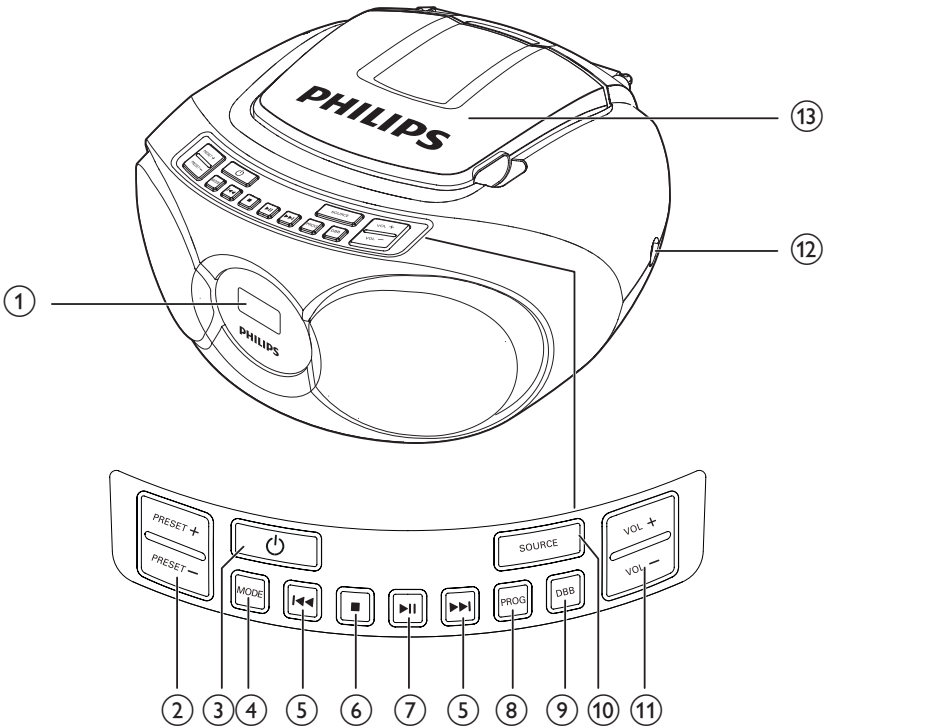

① Display panel

② PRESET -/PRESET +

- Select a preset radio station.

③

- Turn the CD sound machine on or off.

④ MODE

- Select repeat or shuffle mode.

⑤

- Skip to the previous or next track.
- Search within a track.

⑥

- Stop play.
- Erase a program.

⑦

- Start or pause play.

⑧ PROG

- Program tracks.
- Program radio stations.

⑨ DBB

- Turn on or off dynamic bass enhancement.

⑩ SOURCE

- Select a source.

⑪ VOL -/VOL +

- Adjust volume.

⑫ AUDIO-IN

- Connect an external audio device.

⑬ Disc compartment

# 4 Get started

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Connect power

 
You can use either AC power or battery as power supply of this unit.

### AC power

#### Warning

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you disconnect the AC power, always pull the plug or adaptor from the socket. Never pull the cord.

- 1 Adjust the voltage selector at the bottom of the unit to correspond to the local power voltage.
- 2 Connect the AC power cord to:
  - the AC ~ socket on the unit.
  - the wall outlet.

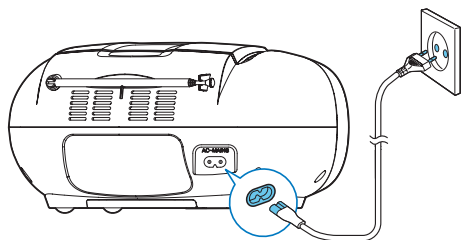

### Battery power

 
#### Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Batteries contain chemical substances, so they should be disposed of properly.

#### Note

- Batteries are not supplied with the accessories.

- 1 Open the battery compartment.
- 2 Insert 6 batteries (type: R14/ UM2/ C CELL) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

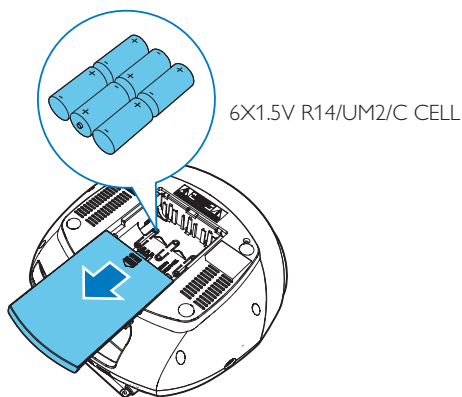



---

## Turn on

Press  $\phi$  to turn on the CD sound machine.

### Switch to standby mode

- The CD sound machine switches to standby mode automatically when there is no audio detected for over 15 minutes.
- The CD sound machine switches to standby mode automatically when playback is stopped in CD mode over 15 minutes.
- Press **▶||** to wake up the unit from standby mode.

---

## Turn off

 
Press  $\phi$  again to turn off the CD sound machine.

# 5 Play

---

## Play disc

- 1 Press **SOURCE** repeatedly to select the CD source.
- 2 Lift to open the disc compartment.
- 3 Insert a disc with the printed side facing up, then close the disc compartment.
- 4 Press **▶||** to start play.
  - To pause or resume play, press **▶||**.
  - To stop play, press **■**.
  - To select a track, press **◀◀ / ▶▶**.
  - To search within a track, press and hold **◀◀ / ▶▶**, then release to resume normal play.

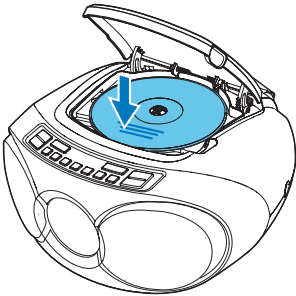

---

## Listen to FM radio

### Note

- Position the antenna as far as possible from TV, or other radiation source.
- For better reception, fully extend and adjust the position of the antenna.

- 1 Press **SOURCE** repeatedly to select the FM source..

- 2 Press **◀◀ / ▶▶** to tune to a radio station.
  - Press and hold **◀◀ / ▶▶** for more than two seconds.
  - ↳ The radio tunes to a station with strong reception automatically.

---

## Program radio stations manually

 
- 1 Tune to a radio station.
- 2 Press **PROG** to activate program mode.
  - ↳ **PXX** displays on the screen. (**XX** indicates number **01-20**)
- 3 Press **PRESET - / PRESET +** to allocate a number from 1–20 to this radio station, and then press **PROG** to confirm.
  - ↳ The preset number and the frequency of the preset station are displayed.
- 4 Repeat steps 1-3 to program more stations.

---

## Play from an external device

With this unit, you can also listen to an external audio device such as an MP3 player:

- 1 Press **SOURCE** repeatedly to select the audio source.
  - ↳ **[AU]** display on the screen.
- 2 Connect the audio in cable (not supplied) to:
  - the **AUDIO IN** socket on the CD sound machine.
  - the headphone socket on an external device.
- 3 Play the external device (see the device's user manual).

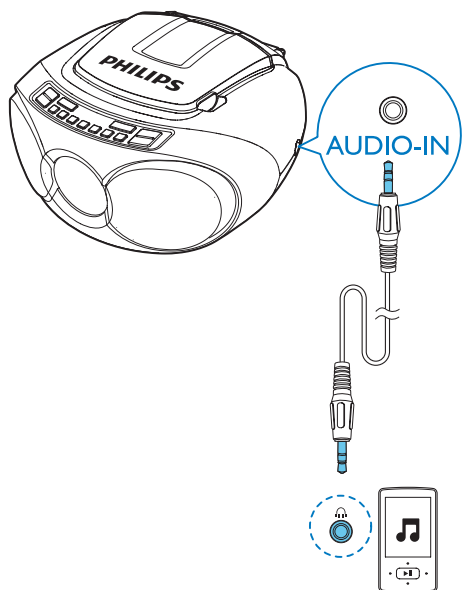

#### Note

- The **AUDIO IN** socket is not for headphones.

---

## Adjust volume

During play, press **VOL -/VOL +** to adjust volume.

---




## Turn Dynamic Bass Boost on/off

Press **DBB** repeatedly to turn dynamic bass enhancement on or off.

# 6 Play options

## Control play

In CD mode, you can control play through the following operations.





	Press and hold to fast-forward or fast-reverse the track during playback, then release to resume play.
	Start or pause play.
	Stop play.
<b>MODE</b>	<b>[REP]:</b> Play the current track repeatedly. <b>[REP ALL]:</b> Play all tracks repeatedly. <b>[SHUF]:</b> Play tracks randomly. To return to normal play, press repeatedly until the repeat icons disappear.

### Tip

- Only **[REP]** and **[REP ALL]** be selected when you play the programmed tracks.

## Program tracks

You can program a maximum of 20 tracks.

- 1 Press  to stop playback.
- 2 Press **PROG** to activate the programming mode.  
↳ **[P01]** is displayed.
- 3 Press  to select a track, and then press **PROG** to confirm.
- 4 Repeat steps 3 to 4 to program more tracks.
- 5 Press  to play the programmed tracks.
  - To erase the program, when playback is stopped, press .

# 7 Product information

## Note

- Product information is subject to change without prior notice.

## Specifications

### Amplifier

Rated Output Power	3W
Frequency Response	80 Hz - 16000 Hz, +/-3 dB
Signal to Noise Ratio	>72 dBA
Total Harmonic Distortion	<1 %
Audio In	600 mV RMS 20 kohm

### Disc

Laser type	Semiconductor
Disc diameter	8/12 cm
Support discs	CD-DA, CD-R, CD-RW
Audio DAC	24 Bits, 44.1 kHz
Total Harmonic Distortion	<1 %
Frequency Response	80Hz - 16000 Hz, +/-3 dB
S/N Ratio	>72 dBA

### Tuner

Tuning Range	FM: 87.5 - 108 MHz
Tuning grid	50 KHz
Preset stations	20
Sensitivity	
- Mono, 26dB S/N Ratio	< 22dBf
-Stereo, 46dB S/N Ratio	< 50dBf
Search Selectivity	26 dBf
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>60 dB

### General

Power supply	
- AC Power	220 - 240 V ~, 50/60 Hz
- Battery	DC 9V, 6 x 1.5 V R14/UM2/C Cell
Operation Power Consumption	10 W
Standby Power Consumption	< 0.5 W
Dimensions	
- Main Unit (W x H x D)	252 x 124 x 232 mm
Weight	
- Main Unit	1.0 kg
- With Packing	1.6 kg

---

## Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 512 (depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32~256 (kbps), variable bit rates

---

## Maintenance

### Clean the cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

### Clean discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.



- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

### Clean the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Philips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

# 8 Troubleshooting



## Warning

- Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page ([www.philips.com/support](http://www.philips.com/support)). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Ensure that the Mains cord is connected securely.
- Ensure that there is power at the AC Mains.
- Ensure that the batteries are inserted correctly.

**No sound or poor sound**

- Adjust the volume.

**No response from the unit**

- Disconnect and reconnect the AC power plug, then turn on the system again.
- As a power-saving feature, the unit switches off automatically 15 minutes after track play reaches the end and no control is operated.

**Cassette does not work for record**

- Ensure that cassette tabs are not broken.

**No disc detected**

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

**Poor radio reception**

- Increase the distance between the unit and your TV or other radiation sources.
- Fully extend the FM antenna.



2015 Gibson Innovations Limited. All rights reserved.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

AZ215\_AZ216\_12\_UM\_V1.0

